



IMPORTANT:

The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the instructions carefully. Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty. Should you ever have any questions or feel you require help please contact your place of purchase for assistance.

Instructions of Safety and Warnings

- Make sure that the mounting surface is strong enough to handle mounted product and equipment.
- **DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.**
- Always be sure to have someone assist you or a mechanical device to lift and position heavy products safely.
- Tighten screws firmly, but do not over tighten. Over tightening can cause product damage that greatly reduces the holding power.
- Keep a clear area and distance from moving parts when using the product.
- Use only as intended. Never stand, hang or climb on the product.
- This product is intended for indoor use only.
- Any attempts to reconstruct the construction or alterations of the given power unit and control box aren't allowed.
- This product may contain small items that could be a choking hazard if swallowed. Keep children away unless the product is intended for their use and all instructions and manuals are fully reviewed and understood by them.
- Check that the product is secure and safe to use at regular intervals (at least every three months).

Other Cautions



Don't clean the product with water while the power is still connected.



Don't disassemble or replace components while the power is still connected.



Never operate the system with a damaged cord or plug.



Never operate the system if it's in moist environment or its electrical components have contact with liquids.



If the control box makes unusual noise or smells, switch off the mains voltage immediately.



Disposal: The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Standby mode condition of electrical and electronic household equipment.

Mode: Standby mode

Power consumption (Watts): ≤0.5W

Time to enter the standby mode condition: This product immediately enters into standby mode when it stops running.


Mode: Networked standby mode

Power consumption (Watts): ≤2W

Time to enter the networked standby mode condition: This product immediately enters into Networked standby mode when it stops running.

Instruction Manual

MOTORIZED TV CEILING MOUNT

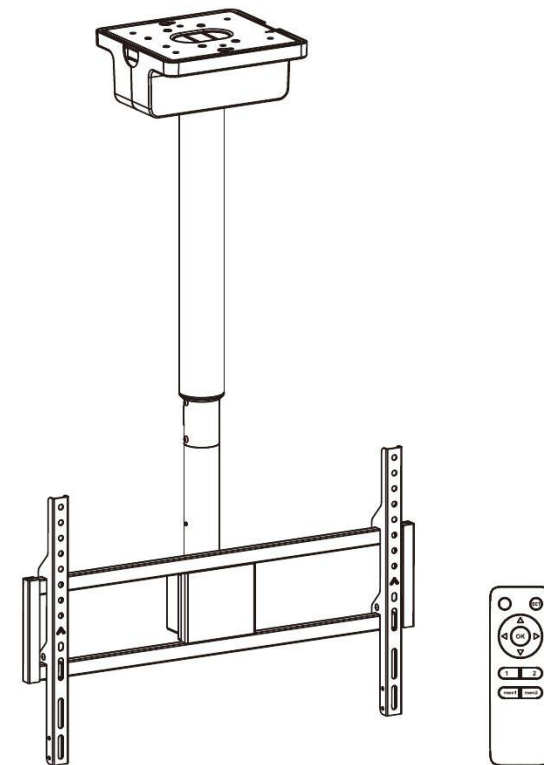

PLB-M0946S

VESA Compatible

200x100	200x200	200x300	300x200
200x400	400x200	300x300	300x400
400x300	600x200	350x350	500x300
400x400	600x300	500x400	600x400

86"
MAX

FLAT/CURVED

65kg
(143lbs)
RATED



THIS PRODUCT REQUIRES MULTIPLE-PERSON INSTALLATION.

Installation

Tools
(not included)









⚠ BEFORE INSTALLATION


1. Please ensure that the parameters of the device you intend to mount fully comply with the requirements of this product.

2. This product is only suitable for installation on wall or ceiling types specified in the instruction manual. Installation on non-specified wall types is strictly prohibited.

3. Ensure the installation location is suitable and there is sufficient space around it to accommodate the product's normal range of movement.

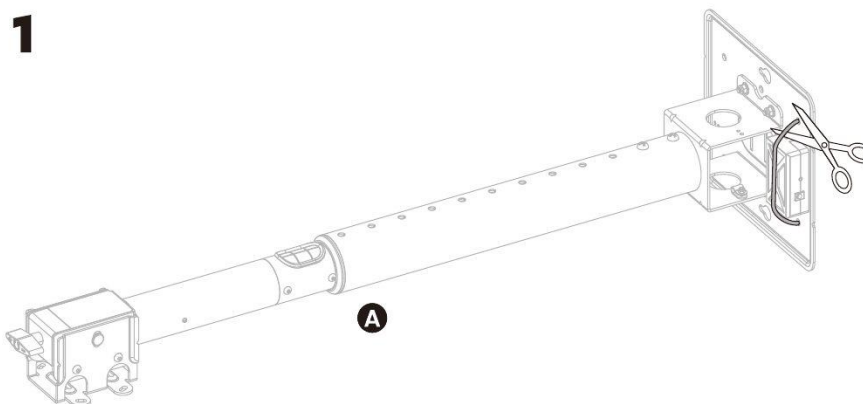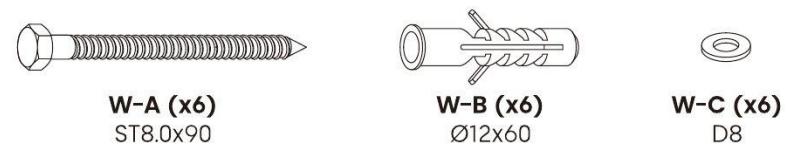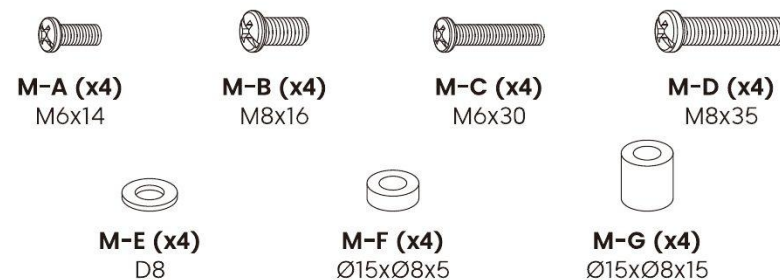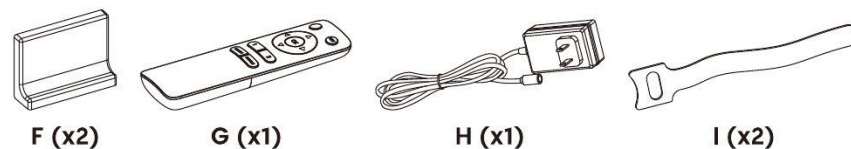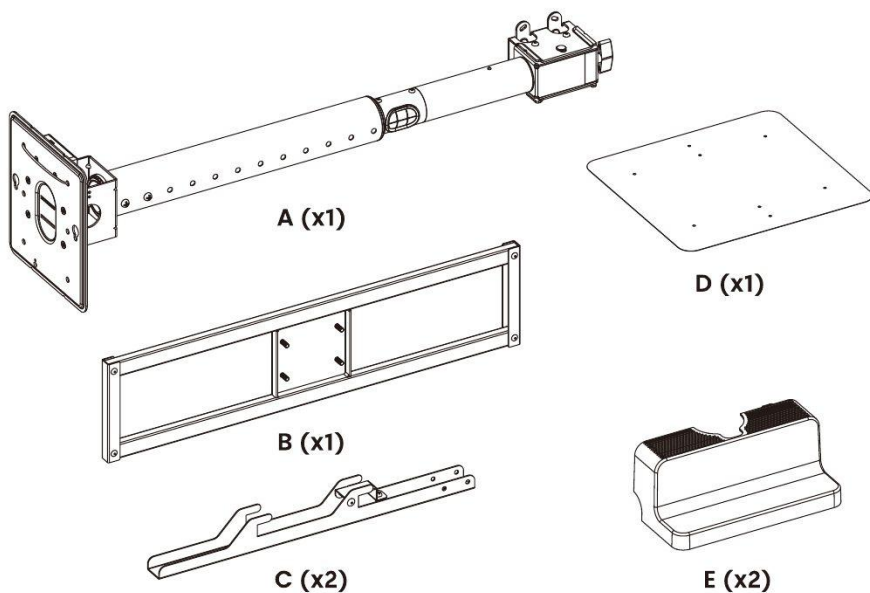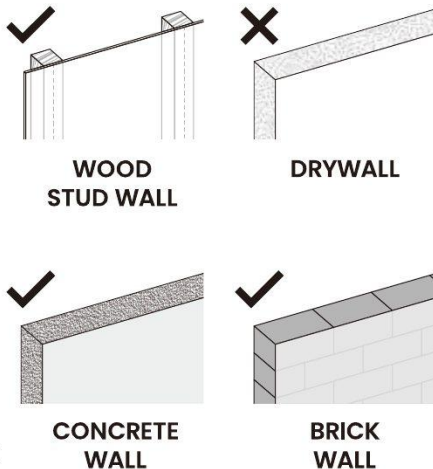


2

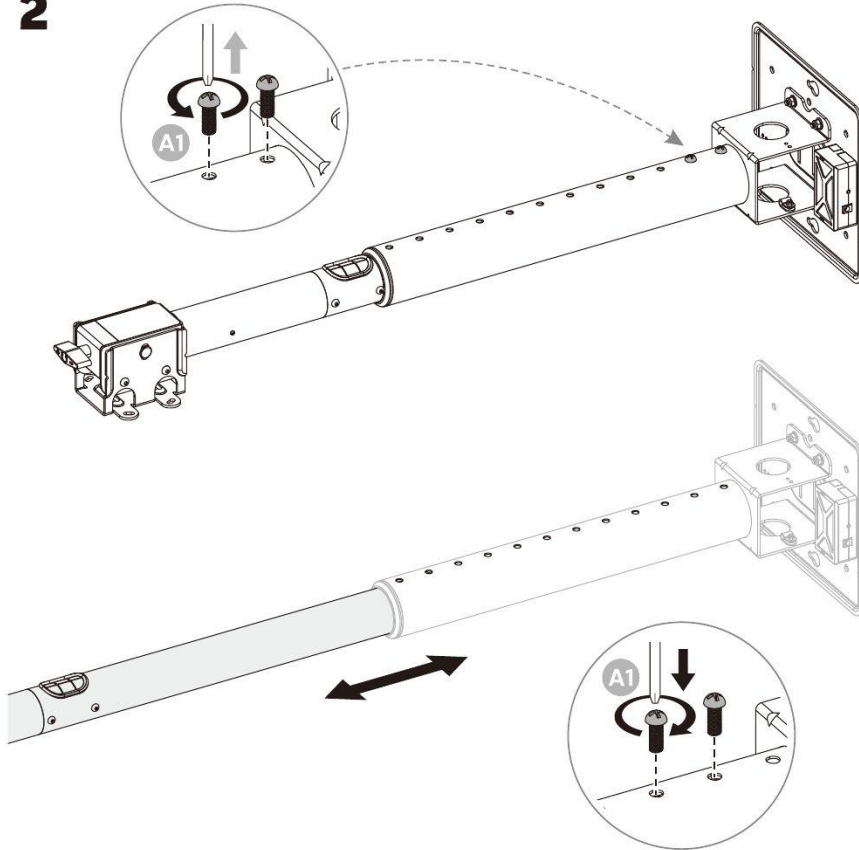


3


Route the cable as shown.

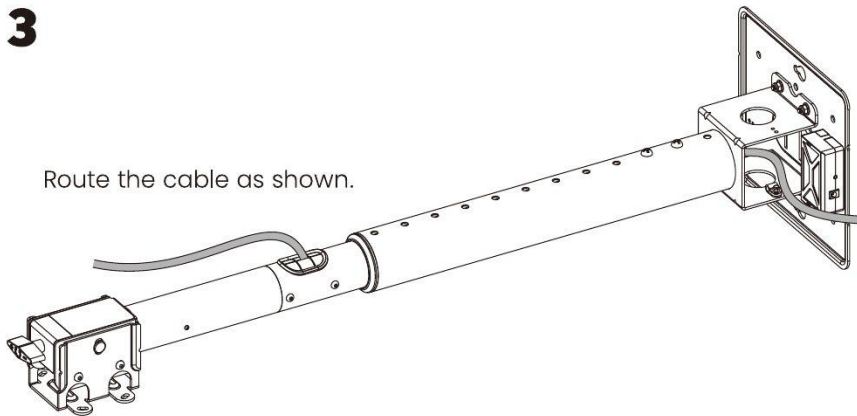



4a For Wood Stud Wall

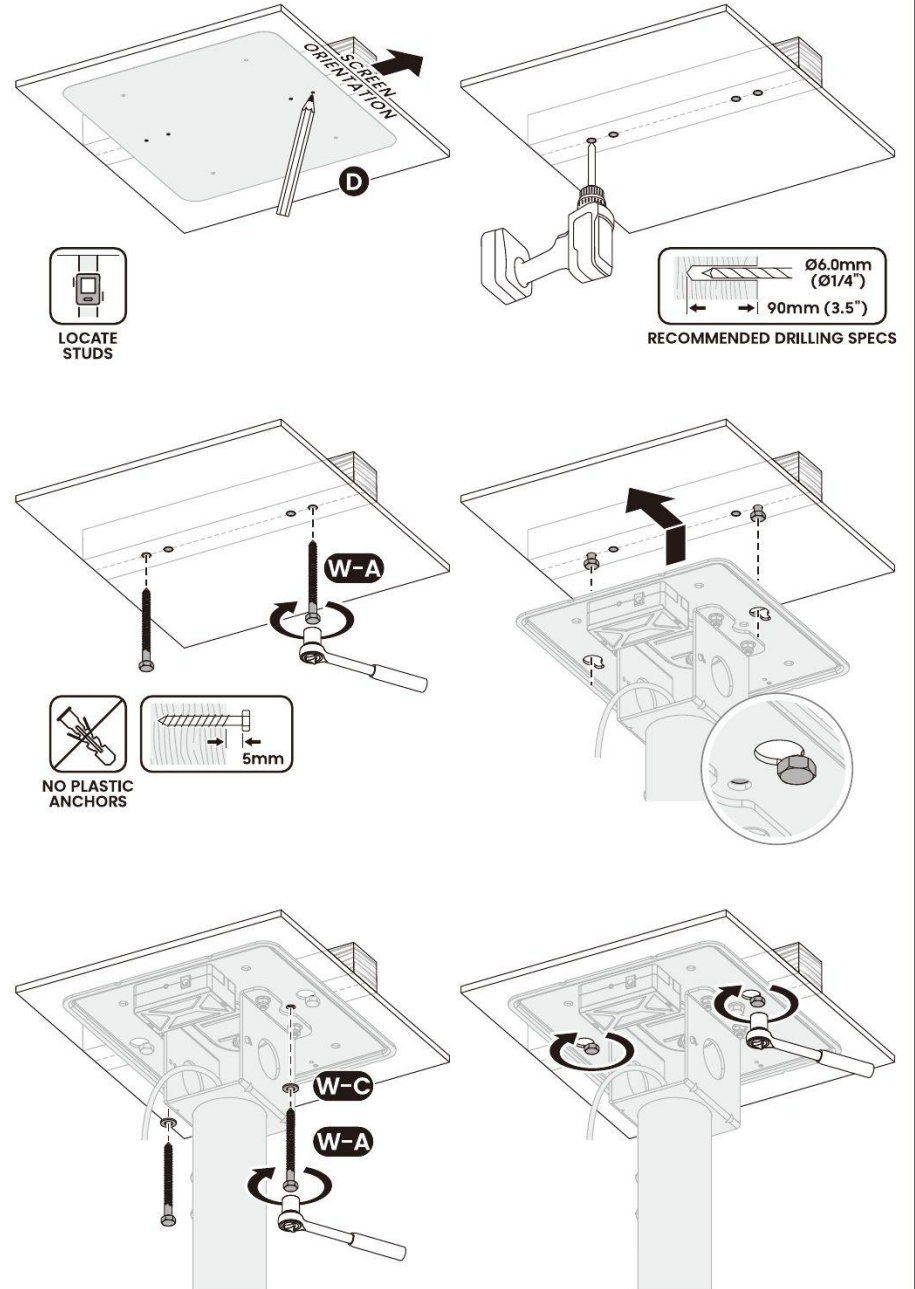


4b For Concrete Wall / Brick Wall

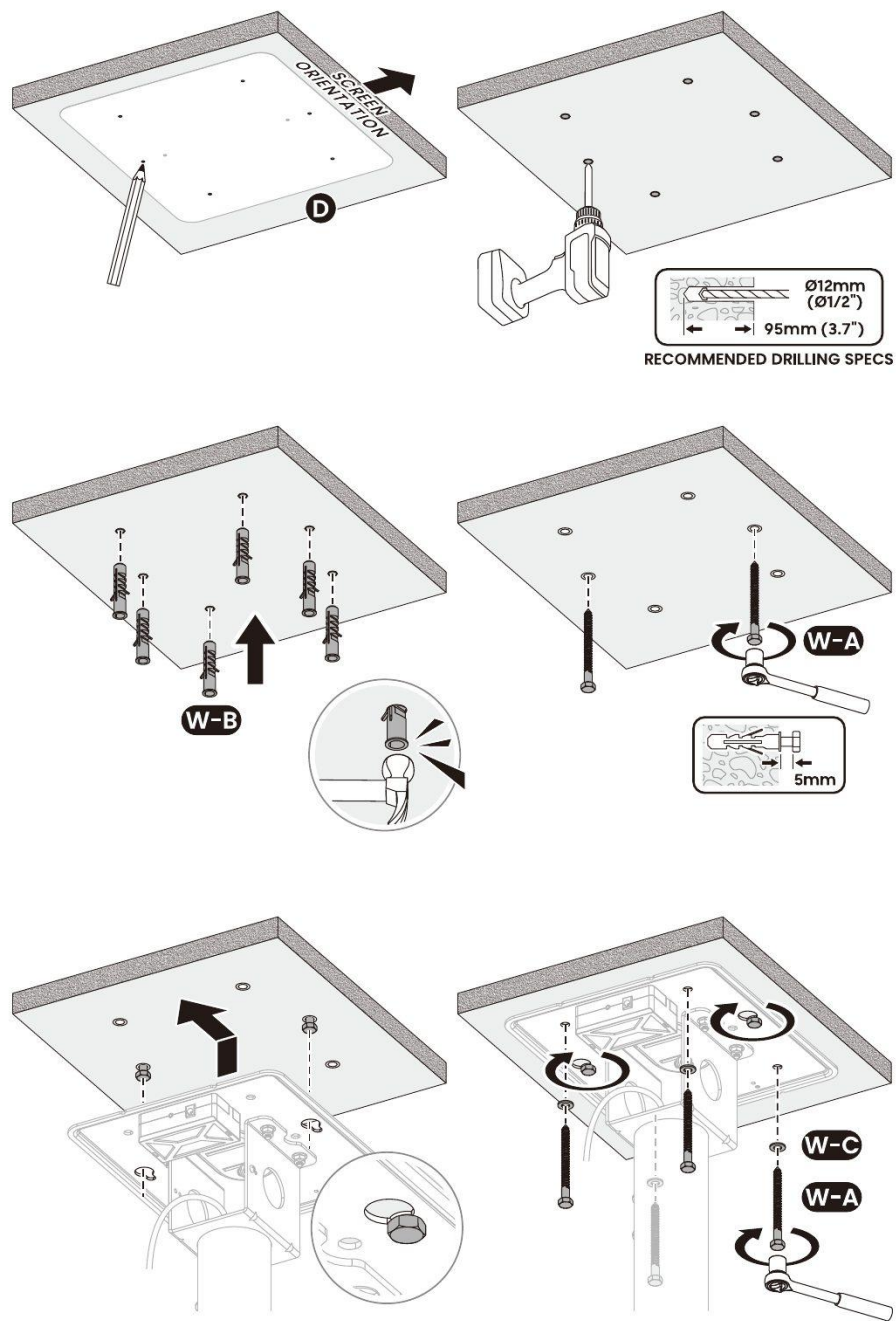

5 Note: DO NOT over tighten the screws, as this may make it difficult to fine-tune the mounting plate.

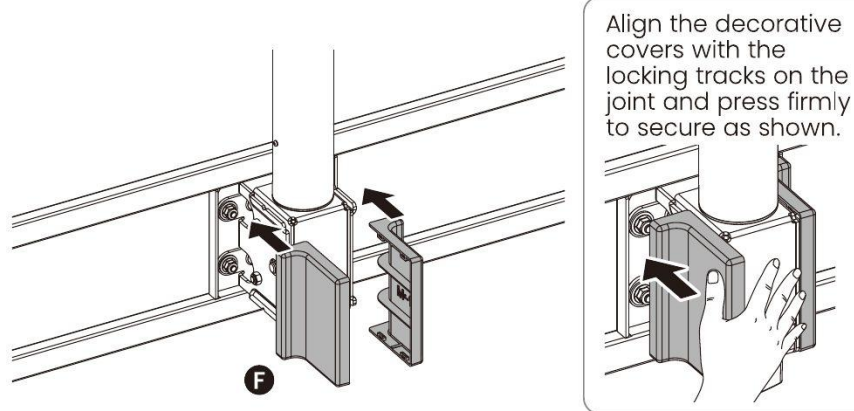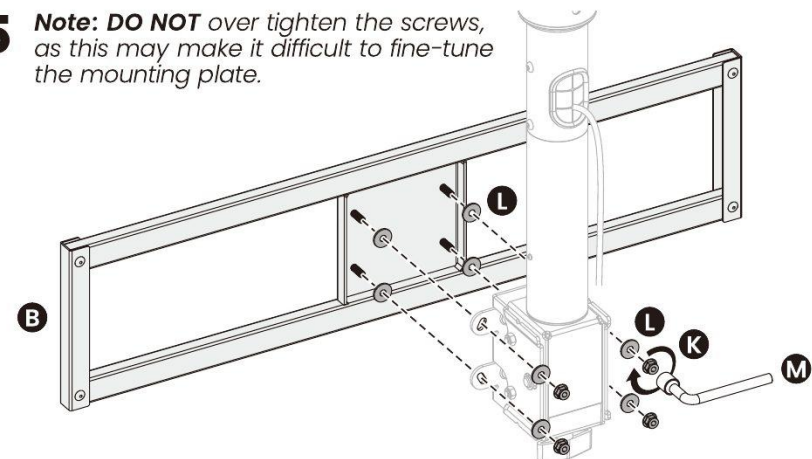

6

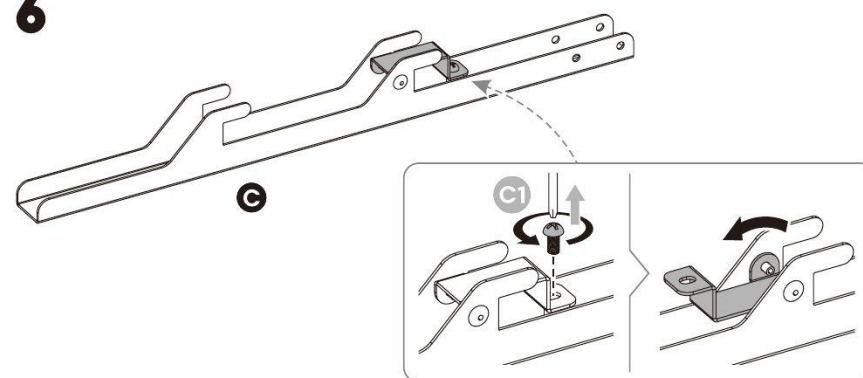

7 CAUTION


To ensure a safe installation, select the proper screw before starting:

- Use screws specified by the TV manual or manufacturer.
- Check length: **TOO LONG** damages the TV; **TOO SHORT** causes falls.



Note: Use a hand screwdriver to prevent damage; power tools are not recommended.

DO NOT OVERTIGHTEN the screws.


Note: Ensure that both mounting arms are horizontally aligned and centered on the back of the TV.

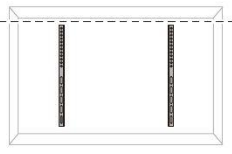


Note: Use spacers if the back of your TV is curved, recessed, uneven, or if the bracket plate does not sit flush against the TV.

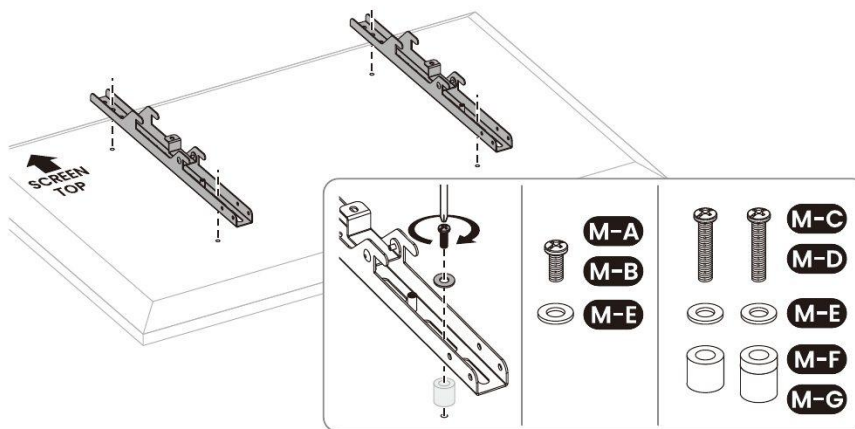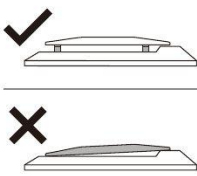


8

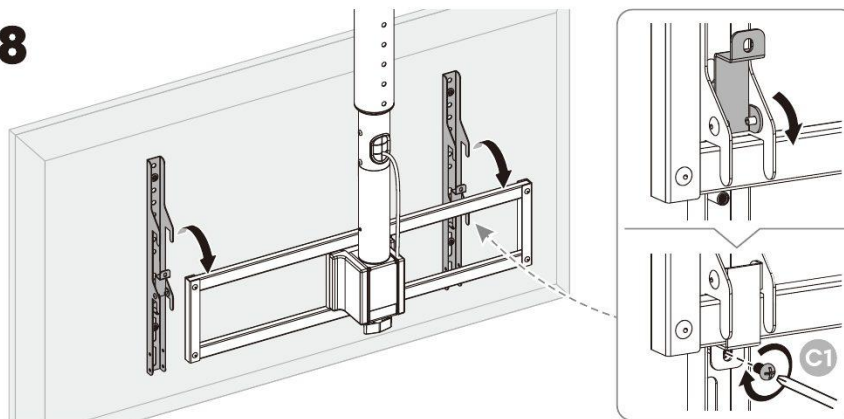



9

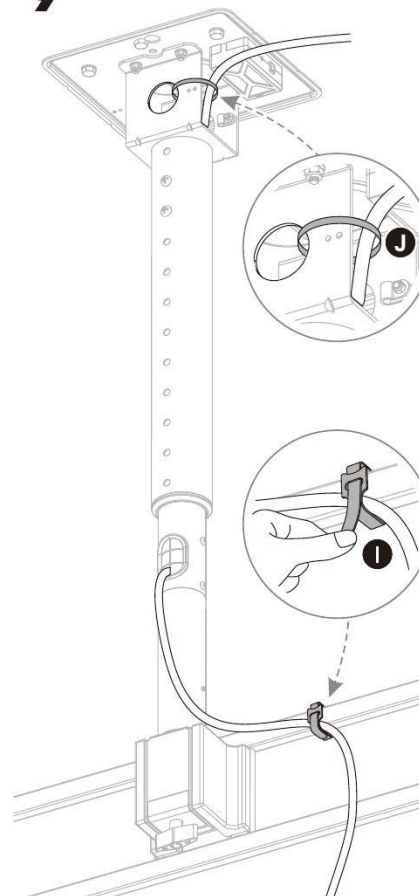

10

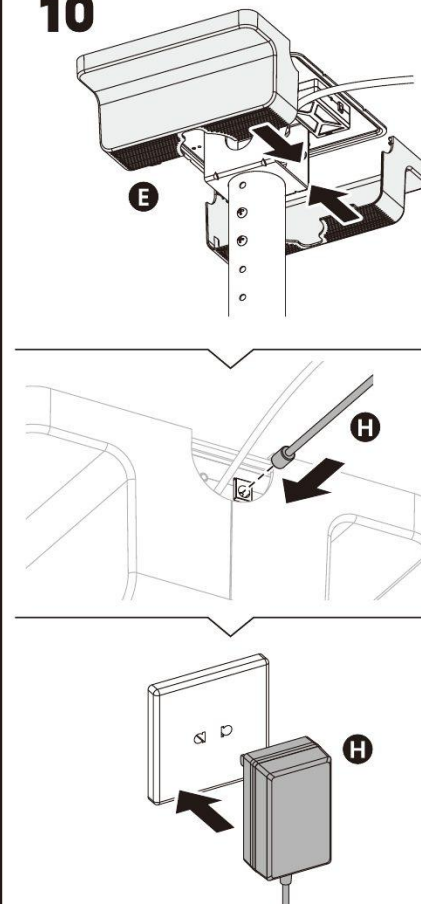

Note: If the display does not stop at your desired position, adjust the knob as shown.

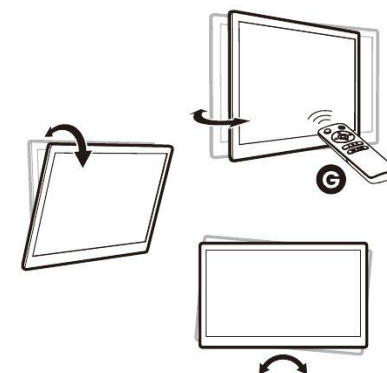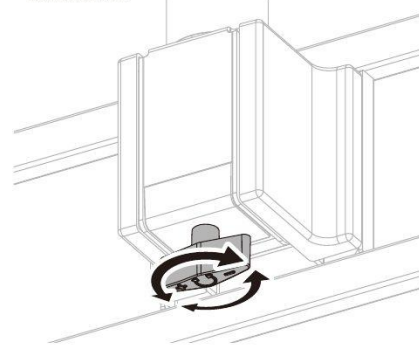


Remote Control Operation Instructions

A. Button Functions

1. Left/Right Side Movement

 - Press the "◀" button, the TV mount will move to the left side (180° by default).
- Press the "▶" button, the TV mount will move to the right side (180° by default).
- Press the "OK" button to stop the motion.
- When the TV mount is stationary and not in the center position, press the "OK" button and the TV mount will automatically return to the default position (center position).



RMT-02
remote control

2. Memory Setting

Press the "mem1" or "mem2" button for 1 seconds and you will hear a beep, indicating that the current position has been saved to memory. The "mem1" "mem2" buttons can each store a different position.

3.Recall Memory

Press the "1" or "2" button and the mount will automatically get to the position saved in the corresponding button "mem1" or "mem2".

4. Reset Mode

If the mount cannot swivel fully to the left or right, or if you wish to reset the center swivel position, power off the TV mount and then power it on again. Press and hold the "OK" button for 5 seconds to set the current position as the center position. A long beep indicates that the reset is successful.

5. Turning on/off the Wi-Fi and Bluetooth modules

(Note: When the product is powered on again, the Wi-Fi and Bluetooth functions are enabled by default.)

- To turn off Wi-Fi and Bluetooth modules: Press and hold the "mem1" button for 10 seconds until the buzzer sounds **once**.
- To turn on Wi-Fi and Bluetooth modules: Press and hold the "mem2" button for 10 seconds until the buzzer sounds **twice**.


When the product stops running, it will immediately enter the standby mode (power-saving).

Note1: Quick press the "mem2" 5 times to disconnect the device from the App.

Note2: The remote controller is powered by two AAA batteries (not included).

B. Coding of Remote Controller and Control Box

Step 1: When the mount is powered on, press the small button on the control box with a thin tool as shown. The unit emits a beep, indicating that the control box is on standby for program coding.

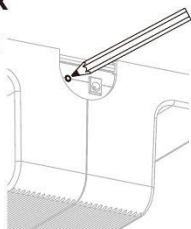

Step 2: Press the "SET" button on the remote control within 10 seconds after Step 1. The control box will repeat beeps for approximately 10 seconds indicating that the remote control is being programmed. The process will automatically finish when you no longer hear any beeps.

Note: The TV Mount can be matched with up to 20 remote controllers.

To clean up the data of all the matched remote controllers and the Phone, press and hold the code matching button until a long beep is heard. This means the clean up has been successful.

In Front

This repair guide intends to help you identify and solve the minor problems caused by unusual operation of the electric system of our electric TV mounts. The simple procedures in this manual are easy to follow and capable of solving the most problems happened in everyday use.

Error Indication

The Buzzer Constantly Gives Out Alarm Sound:

The Error Of Positioning Signal

Reset the system by following the instruction manual. If the alarm sound continues, please contact us to replace the product.

 


Remote Control Problems

1. Abnormal Loss Of Power


(Normally Batteries Are Out Of Power After 24hrs Without Using The Remote Control.)

Please contact us to replace remote control.




2. Buttons On Remote Control Don't Work.

 Please check if the batteries have power. If the problem isn't solved, please contact us to replace the remote control. If the problem is still not solved after the replacement, please contact us to replace the product.



3. The Insensitivity Of Remote Control (The Functional Distance Is Less Than 3m.)

 
Please replace the batteries. If the problem is still not solved, please contact us to replace remote control.



Abnormal Operation

Swivel Adjustment Restricted

 Please reset the system by following the instruction manual. If the problem is still not solved, please contact us to replace the product.



Can't Operate

Please check if the power adaptor is properly connected to the product. If so, please turn the power on. If there is no buzzer sound or red light power indication, please check if the power adaptor works properly. If the power adaptor doesn't work please contact us to replace the power adaptor. If the power adaptor works properly, but the TV mount doesn't work, please contact us to replace the product.



Abnormal Noise

Please contact us to replace the product.

